

FIG. 1A



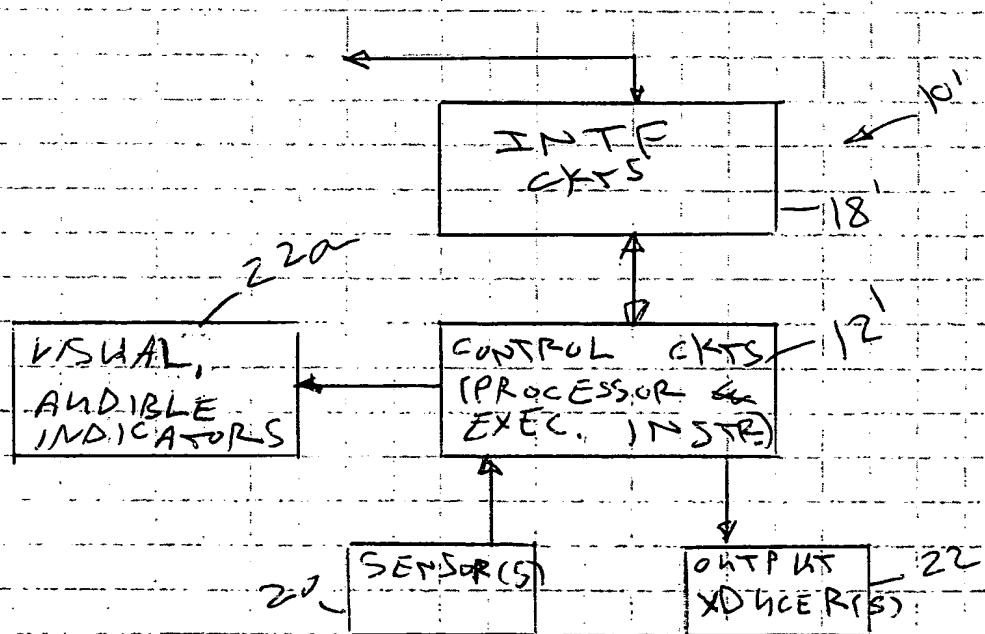


FIG. 1B

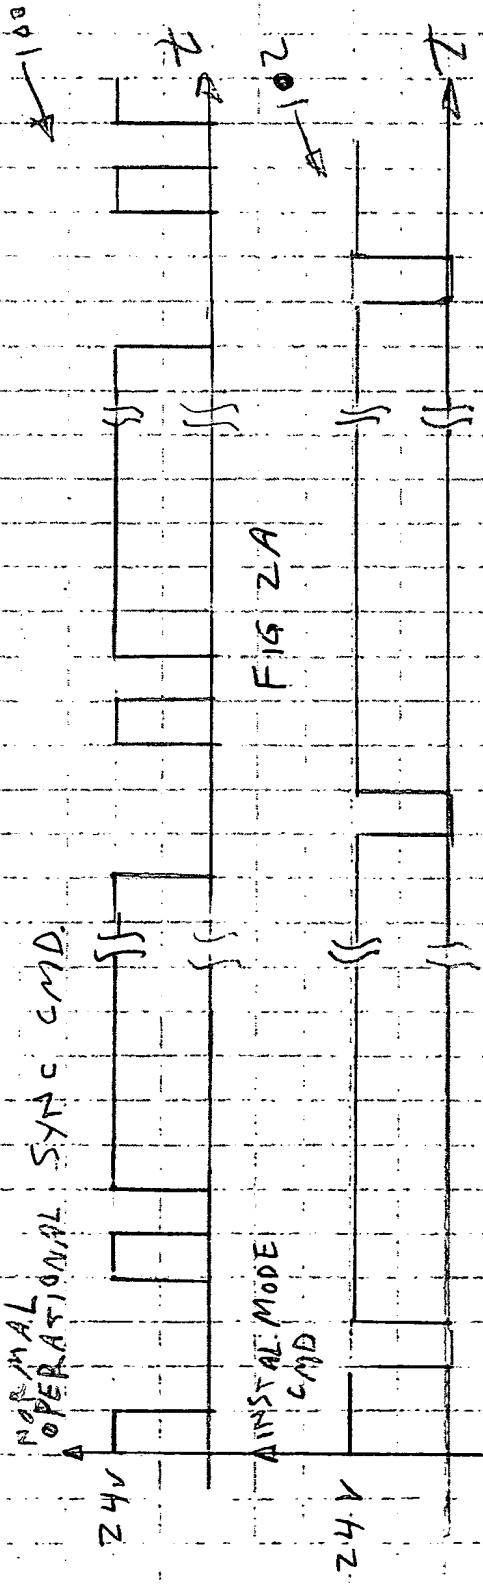

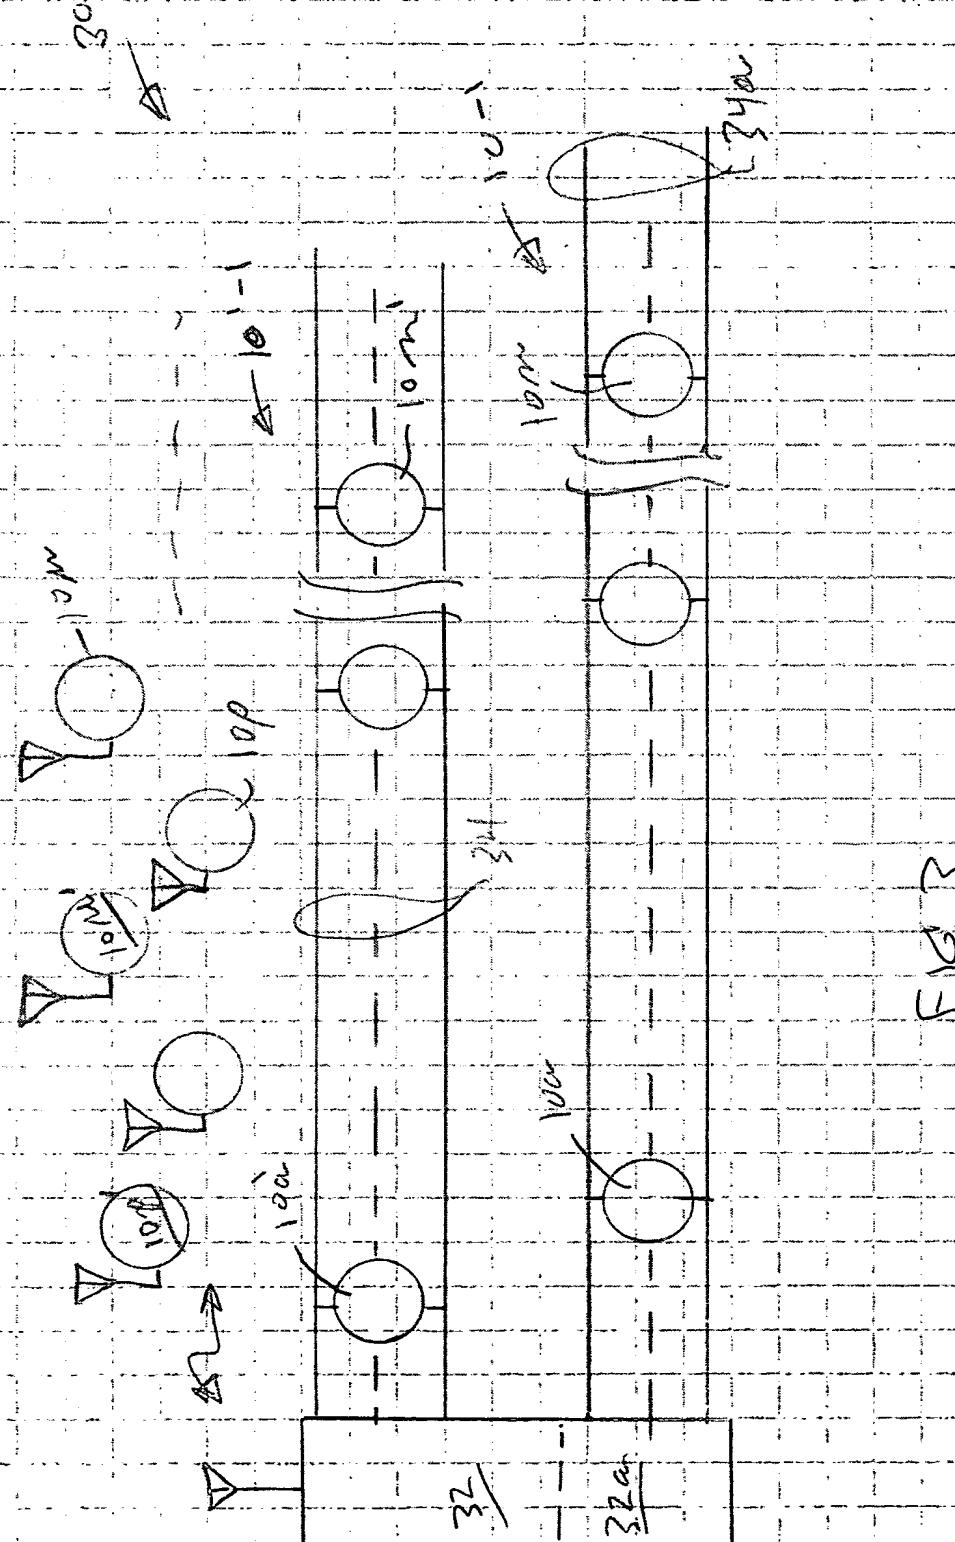

ENTER

150

↓
PROVIDE POWER &
GENERATE INSTALL
MODE COMMAND SIGNAL — 152

↓
APPLY POWER & COUPLE
INSTALL MODE COMMAND — 154
SIGNAL TO NEXT UNIT

↓
ENTER INSTALL MODE AND
EXECUTE INSTALL MODE/
SELF-TEST SEQUENCE ONCE;
OUTPUT INDICIA INDICATIVE
OF RESULTS — 156

↓
TERMINATE INDICIA &
SENSE INCOMING INSTALL
MODE COMMANDS. ALL
(INSTALLED UNITS) REMAIN — 158
SILENT

160

↓
MORE UNITS —
TO INSTALL
N

↓
TERMINATE INSTALL
MODE COMMAND SIGNALS — 162

↓
EXIT

FIG. 4

